




Installation Guide Fidlock Mini Turn Thread

Included in delivery:	
Required tools:	

The Mini Turn needs a material thickness of min. 1,5mm to max. 2,5mm.

[Download here the template for marking the fixation, and print without scaling the size.](#)

Cutting out of the template

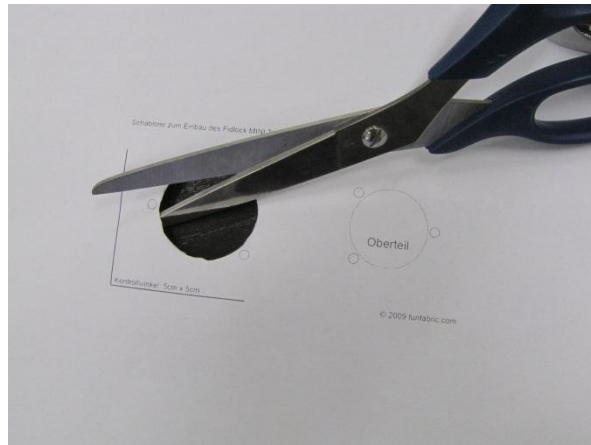

Put the template on the fabric and copy it to the fabric.

Pay attention to the exact adjustment!!!!

Cut/stamp a hole in the fabric.



Certainly not!!!
Template for the top part in misused adjustment!



Install the bottom part.


„FIDLOCK patented“ must be readable!!!




Certainly not!!!




Fix the bottom sleeve on the back side with a face spanner.

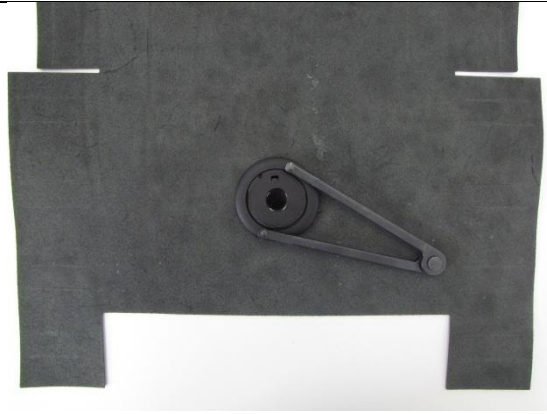

Install the top part.

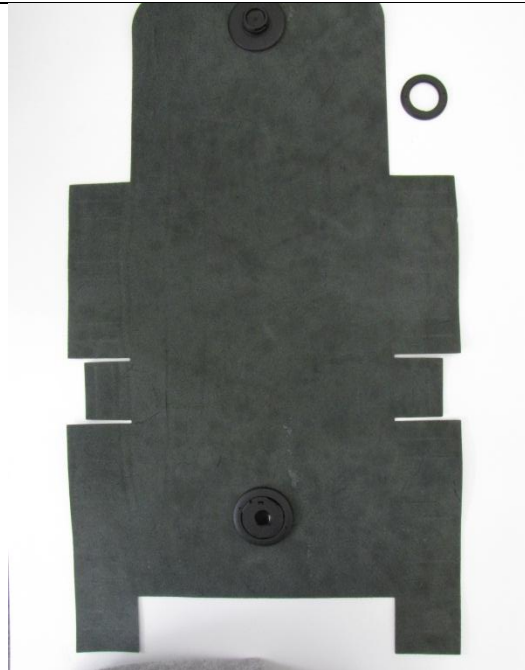

Fix the top sleeve on the back side with a face spanner.



In case your fabric is not strong enough, we strongly advise to make additional templates from a tear-resistant layer from a hard material like PP, carton or leather in 1mm-1,5mm thickness.


Put the bracing between the locking pieces (see figure).



Attention!

Please note which handle belongs to your delivery.

Assembled some designs are permanent fixed and not removeable!

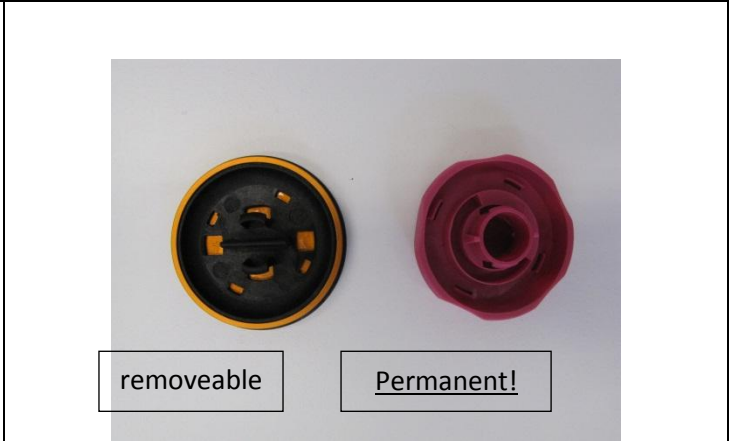

Close the lock.



At last bring the handle into the line with the top part and fix it with a audible lock.

